


Anchor Installation Instructions

For RAWL CALK-IN Anchor.

GSAS Specification: FF-S-325 Group 1 Type 1 Class 1

A


Mark Hole Locations
on Floor, and Drill
Holes the Same
Diameter as Anchor.*

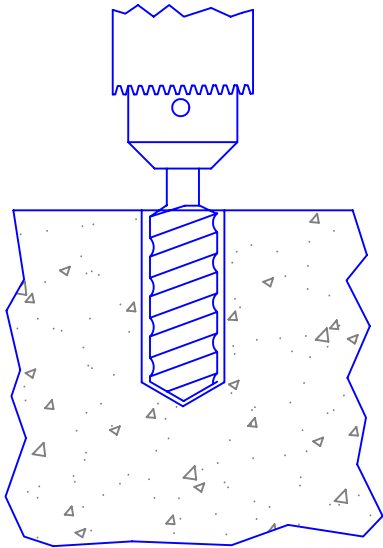

*Depth of Hole Shall be so
That the Top of the Anchor
When Installed, Is Flush With or
Below the Level of Floor.


B

Insert Calk-in into hole, threaded
cone first, and then calk with
several sharp hammer blows.

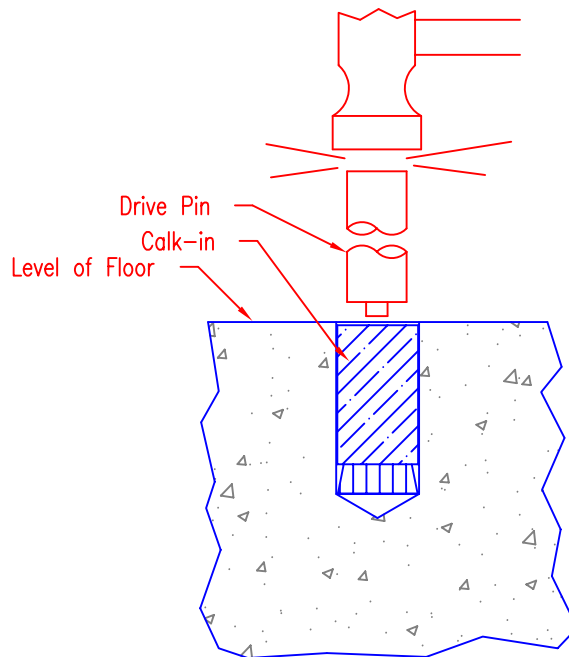

C

Position footplate, insert and tighten
bolt. Maximum length for bolt is one
which will engage at least 2/3 of the
threads in the cone, after the footplate
is in place.

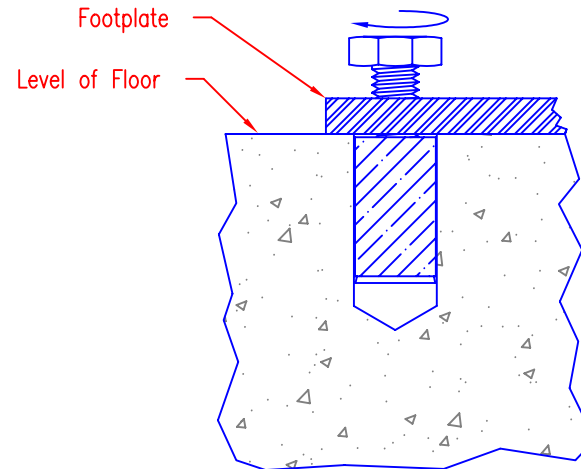

UNICOR METALS DIVISION

DRAWING DESCRIPTION		DRAWING NO.		DATE	
INSTALL INSTRUCTIONS RAWL CALK-IN ANCHOR		INST-003		INST	
SIZE	SCALE	DATE	BY	CHKD	APP'D
A	1/4" = 1'-0"	11/11/03	FE		
FEDERAL CORRECTIONAL INSTITUTION EL RENO, OKLAHOMA		APPROVED			
REVISIONS		DATE			
REVISIONS		DATE			
REVISIONS		DATE			
REVISIONS		DATE			